VME_FSM

DRAWING

LAST_MODIFIED=Tue Dec 10 16:29:47 1996
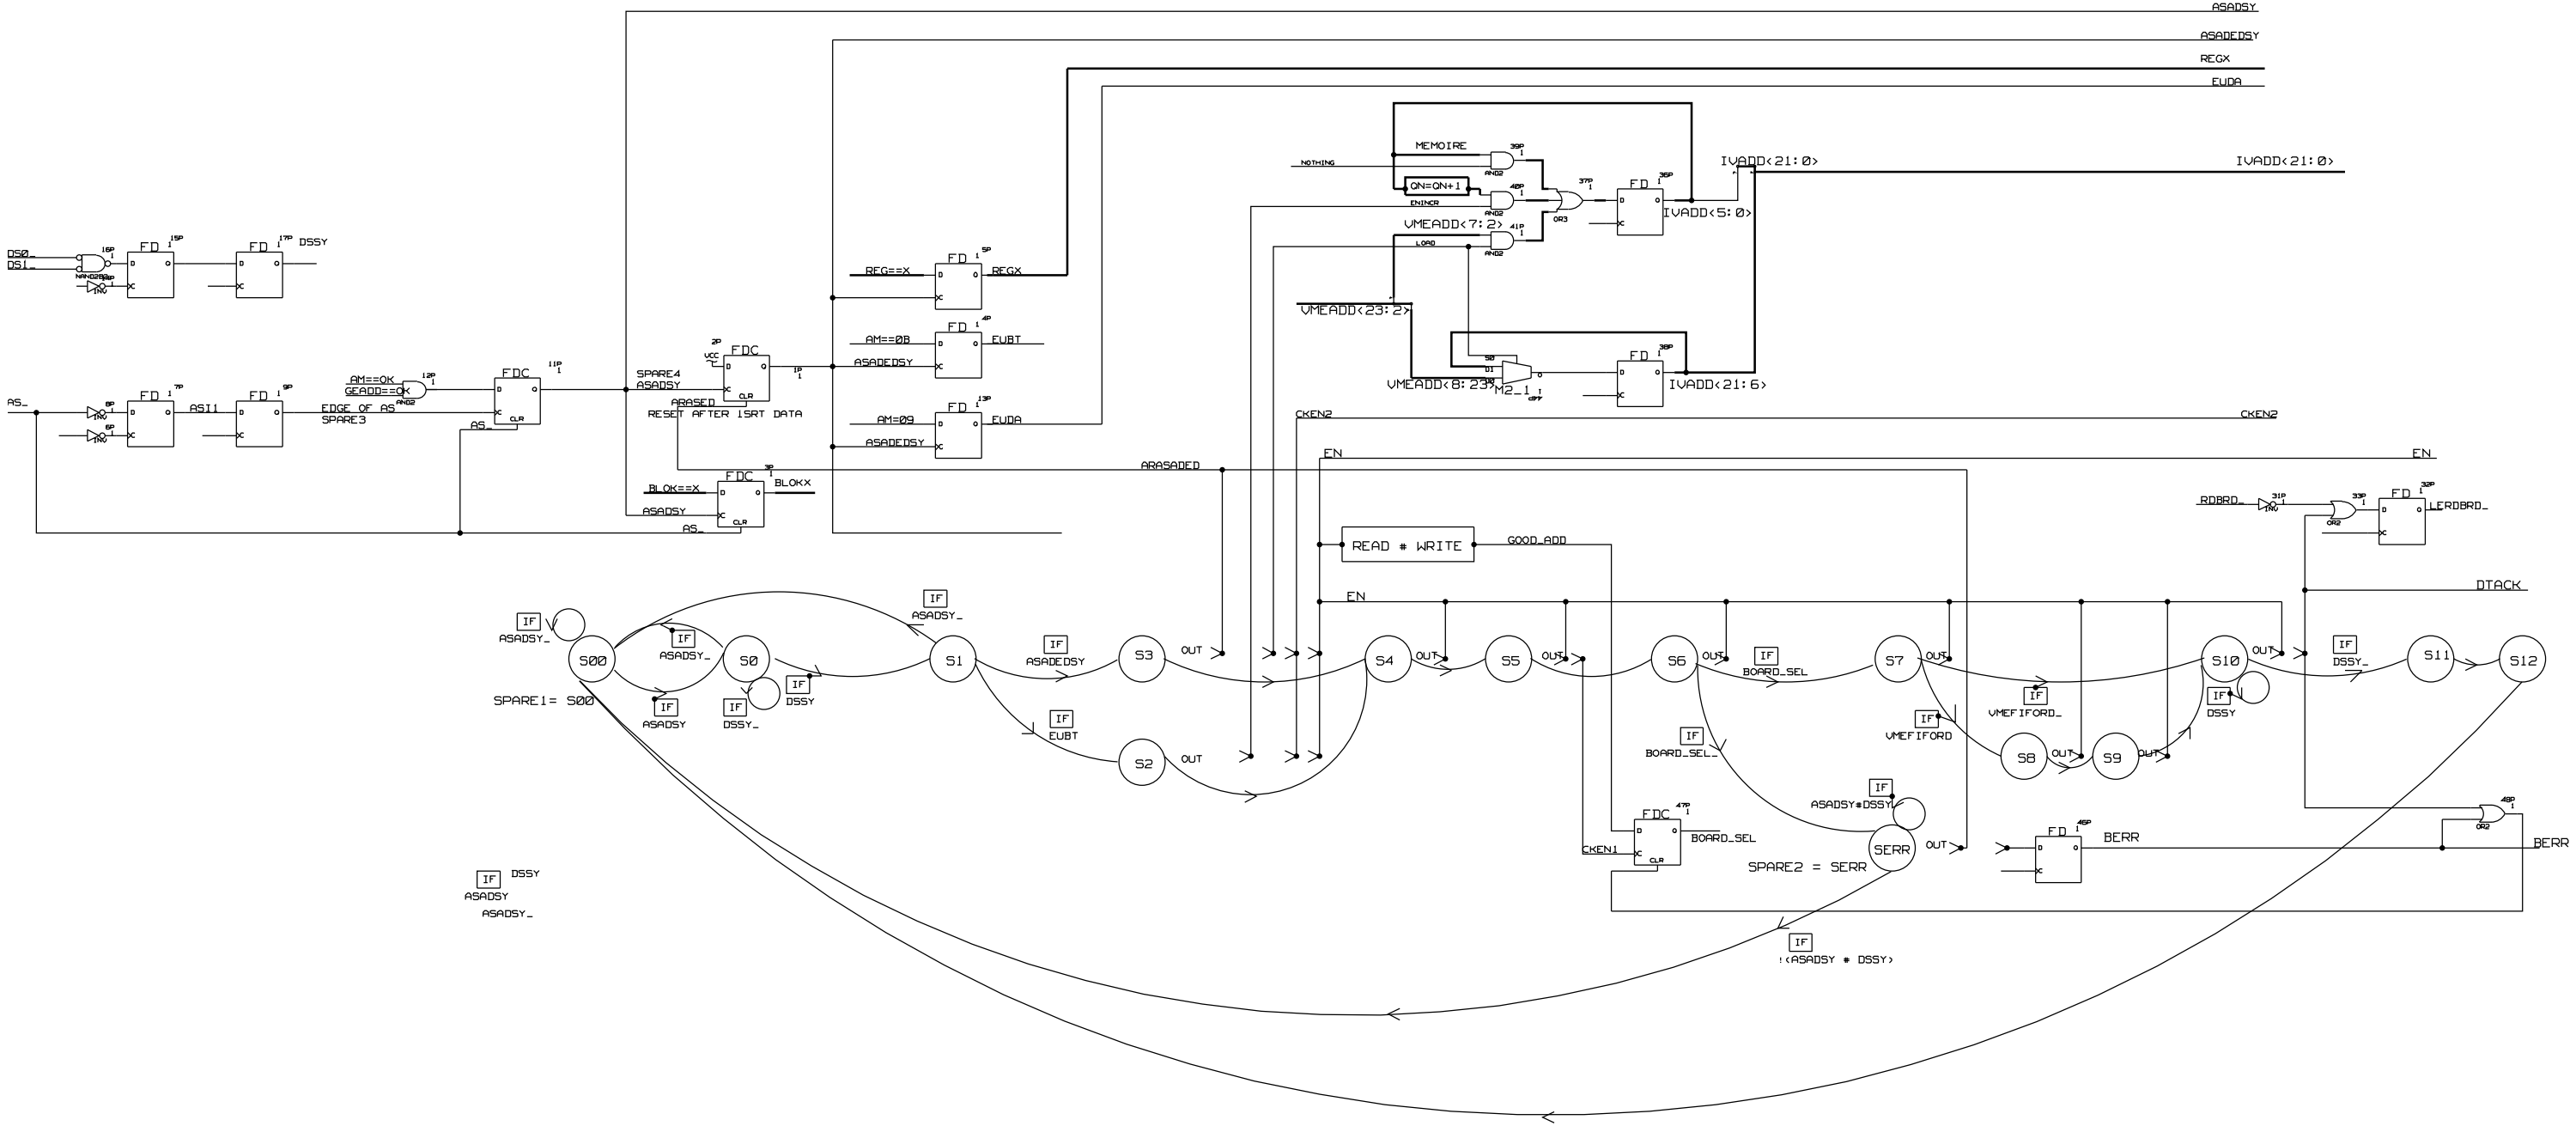
SPARE1 = S00 =READY_STATE
SPARE2 = SERR
SPARE3 = EDGE OF AS
SPARE4 = ASADSY